

### Main Specifications

Rated Voltage: 220V  
Rated Frequency: 50Hz  
Rated Power: 13W

### Disposal

Please dispose of your unwanted electrical items responsibly.

### Warranty

This fan is covered by a 12-month warranty, effective from the purchase date.  
The warranty does not cover any damage that is caused by any incorrect installation or any improper use.




# Sturm

## CLIP FAN 20W



### Identification of Components

1. SWITCH
2. MOTOR HOUSING
3. FAN HANDLE
4. REAR GUARD
5. MOTOR SHAFT
6. PLASTIC BLADE
7. FRONT GUARD
8. FAN ANGLE ADJUSTMENT
9. ROTARY PILLAR
10. ROTARY JOINT
11. CLIP
12. PLASTIC BASE (Base models only)

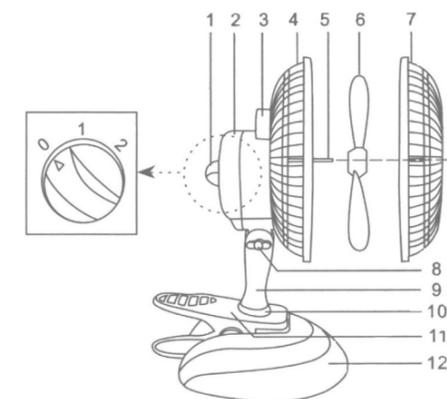

Thank you for choosing to purchase a Black Orchid product.  
Before using your fan, please read this manual carefully.

### Safety Guidelines

1. Read the rating label (stuck on each fan) make sure that the voltage conforms to your electricity supply.
2. If the tamperproof seal is broken or the package is damaged, please check the contents before signing for it.
3. Please check the parts list before commencing any assembly (if required)
4. Do not plug your fan in before it has been completely assembled!
5. Always position your fan on a firm, flat surface.
6. Your fan is for indoor use only.
7. Do not allow your fan to come into contact with water, clean with a dry cloth.
8. Only use your fan for its intended purpose.
9. Do not place your fan near a heating source.
10. Do not leave your fan unattended if there are young children present.
11. Always leave your fan unplugged while not in use or during maintenance!
12. Do not insert fingers or any other objects into the fan.

### Important Notes:

Any unauthorised repairs will invalidate your warranty.

### Function

2-speed settings  
Multi-directional airflow.


### Assembling

1. Attach the clip onto the PLASTIC BASE (Base model only) (see Fig.1)
2. Install the fan onto the ROTARY PILLAR and tighten the FAN ANGLE ADJUSTMENT (see Fig.2)

### Operating

Place your fan on a firm, flat surface and plug it in.

1. Select the required speed  
Speed-1—Low  
Speed-2—High  
Speed-0—Off
2. The fan can be adjusted through 360 degrees on its central pillar (see fig 5)
3. The fan can be adjusted through 45 degrees vertically (see fig 4)
4. The fan can be clipped to flat boards (see fig 3)

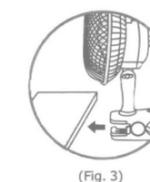

### Maintenance

The fan can be cleaned with a duster or soft dry cloth.  
Do not use harsh or abrasive cleaning products.

### Important Notes:

Always unplug your fan before attempting cleaning or maintenance.

### Trouble Shooting

1. If you experience any problem with your fan, please return it to its supplier, don't attempt to open the motor housing or any other sealed components.
2. Check your electric cord for wear and tear, if it is damaged, it must be replaced by a qualified electrician it is strongly advised that you do not operate your fan if the electrical cord is damaged!

